

PRODUCT FICHE

1. Supplier`s name or trademark	Greyko Engineering Ltd. 61A Otets Paisii Str. 5100 Gorna Oryahovitsa Tel.: +359 618 84 019 e-mail: office@greyko.com http://www.greyko.com
2. Supplier`s model identifier	Pellet Stove BIJOU 10/16/25
3. Energy efficiency class	A+
4. Nominal heat output	10kW/16.64 kW/25kW
5. Energy efficiency index	128%
6. Energy efficiency	92,1%
7. Specific precautions during assembling, installing or maintaining	

- The pellet stoves BIJOU are designed for room heating through automated burn in the combustion chamber of wood pellets class A+ with a diameter of \varnothing 6-8 mm. The appliance warranty is void if unauthorized combustible materials are used.
- All local regulations, including those relating to national or European standards, must be observed when installing the pellet stove.
- Rating label is placed on the back of the pellet stove.
- Necessary for the proper operating of the pellet stove is its proper installation in accordance with the following instructions in a fireproof room, equipped with electricity and ventilation openings providing good air exchange.
- Make sure that the installation and operation of the pellet stove is in accordance with the requirements specified in the user`s manual. The warranty is void if this condition is not met.
- Do not obstruct air from entering the room where the pellet stove is installed, as well as through the openings of the pellet stove itself.
- Pellet stove is equipped with safety components that guarantee its blocking automatically in case of failure of any of its components. Safety components are activated without outside interference.
- The temperature of the room where the pellet boiler is installed must not be lower than 0°C
- Do not mount any adapters to flue pipes and chimney.
- The pellet boiler should be serviced only by adults who are familiar with the operating instructions.
- Do not leave children and disabled persons unattended near the facility.
- The fire door must not be opened during boiler operation. The combustion process is automated and requires no external intervention.
- Ignition of the pellet stove is not allowed if there are any cracks or other damages on the glass.
- External substances in the combustion chamber or hopper are unacceptable.
- Do not wet the pellet stove or approach the pellet stove and its electrical parts with wet hands.
- During operation of the pellet stove, the knobs and the doors are hot.
- The door handle is hot during operation of the pellet stove. It must be serviced with a heat-resistant glove.
- Do not use flammable materials to clean up the flue pipes.
- Keep flammable objects and liquids away from the pellet stove.
- Never use flammable liquids to ignite the pellet stove.
- Cleaning and maintaining should be done when the equipment is turned off and cooled down.
- Use a vacuum cleaner to clean.
- Do not use water to clean the inside of the pellet boiler.
- Pellets removed from the combustion chamber must not be returned to the hopper.